
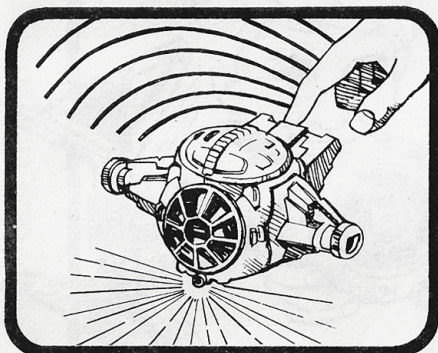


BATTERIES

(2 "AA" Penlite batteries not included)
**Alkaline batteries recommended
 for extended battery life.**

1. Turn TIE INTERCEPTOR upside down. Slide battery cover out.
2. Put batteries in **exactly** as you see here.
 Replace cover.
3. Push button on top of battery compartment for Laser Light and Sonic Sound.

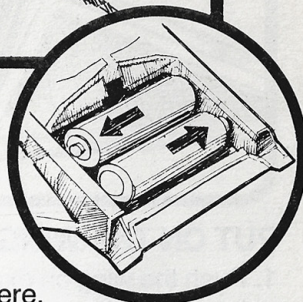

**IF YOU HAVE SONIC
 SOUND, BUT NO LIGHT,
 YOUR BATTERIES ARE
 IN BACKWARDS.**

WE REALLY DO CARE!


We make each toy with tender loving care. If there is a problem with your toy, as you receive it, please let us know. Simply describe the problem and mail that description along with

your name and address to:
 KENNER PRODUCTS
 Consumer Relations Dept.
 1014 Vine St.
 Cincinnati, Ohio 45202.

082200900

STAR WARS RETURN OF THE JEDI

TIE INTERCEPTOR VEHICLE

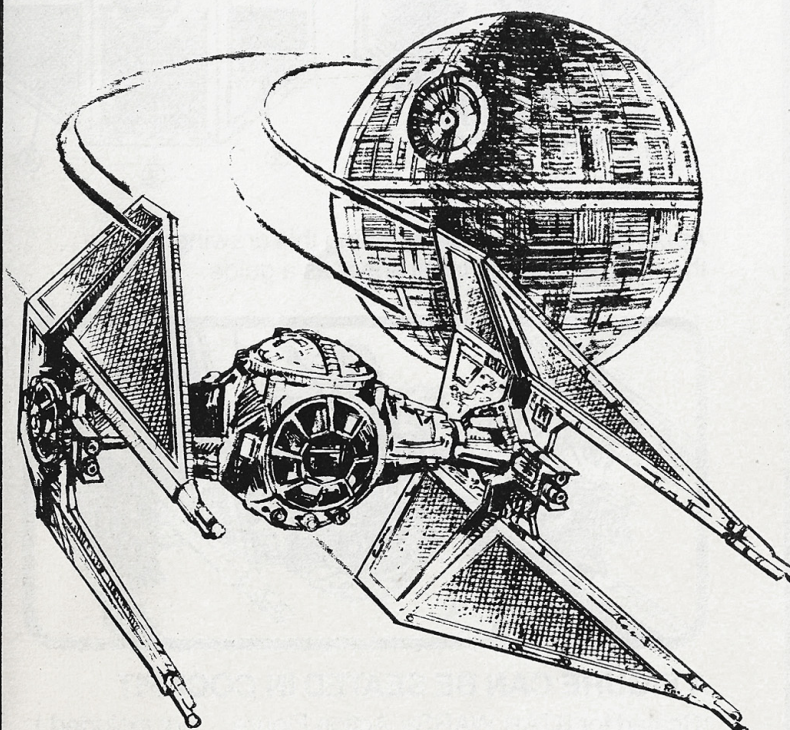

Kenner


® TM & © Lucasfilm Ltd. (LFL) 1983.
 All rights reserved.
 Kenner Products, a Div. of CPG Products Corp.,
 Authorized User.

* KENNER is the trademark of CPG PRODUCTS CORP., by its DIVISION, KENNER PRODUCTS, Cincinnati, Ohio 45202




STAR WARS VISUAL GUIDES
WWW.JEDITEMPLEARCHIVES.COM

From the Collection of
George Telesco

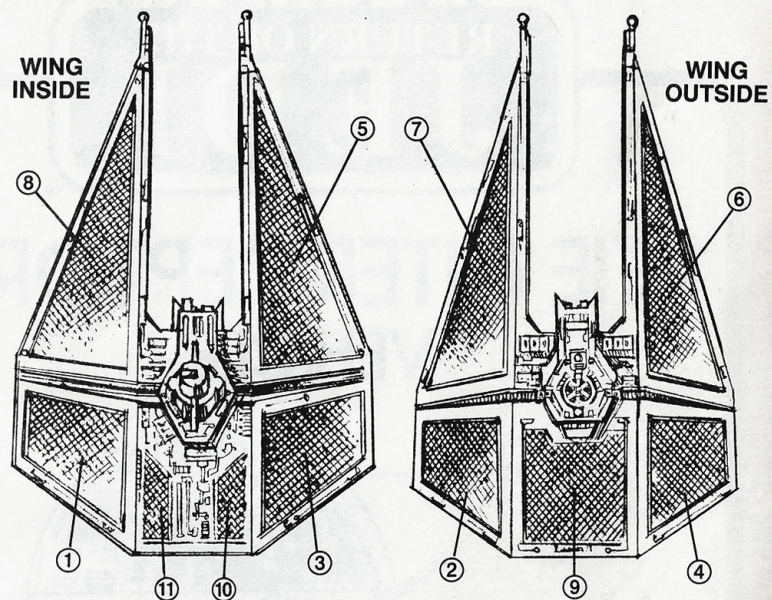


Apply labels to each wing, using this drawing and the numbers on the label sheet as a guide.

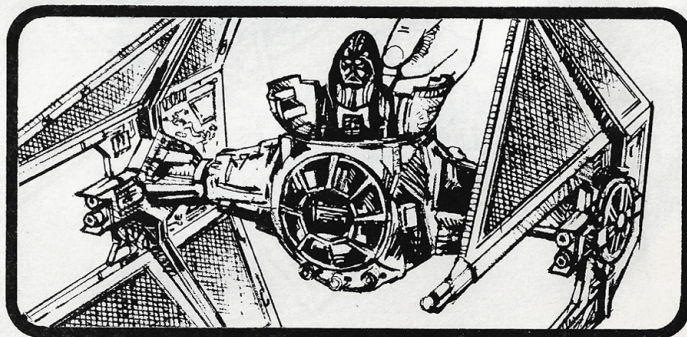

A FIGURE CAN BE SEATED IN COCKPIT


(Scaled for STAR WARS® Action Figure... not included.)

1. Open hatch.
2. Raise seat and insert character.
3. Lower seat, close hatch.

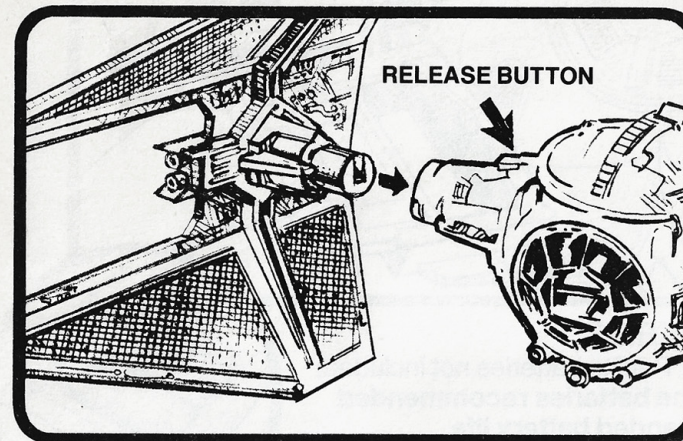

PUT ON THE WINGS

1. Push the wing on **exactly** as shown until it "snaps". (You may have to push the release button slightly as you push the wing on.)

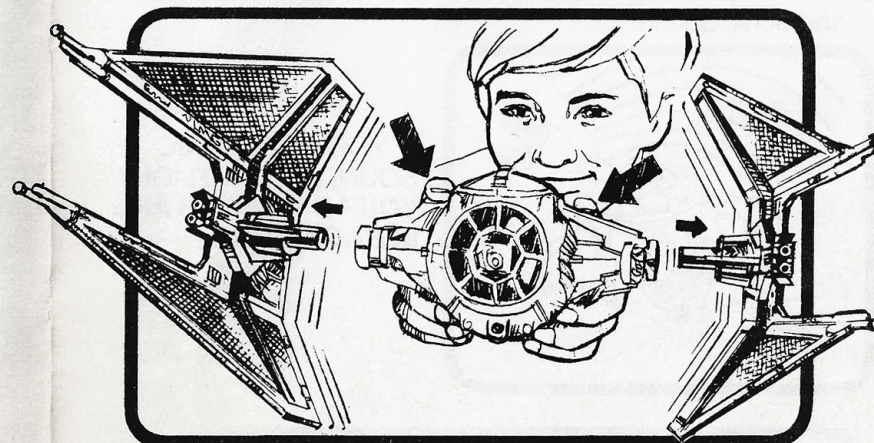

RELEASE THE WINGS

1. To make the wings "fly" off, push the release buttons on each side of the hatch.

